





Edition: April 2019


Substructure

The subbase must be even and stable against frost.

Installation

Install Diamond and half Diamond by optional steel mountiong anchor into a prepared Fresh concrete bed located over a stable-bearing substructure.

EUROFLEX® half Diamond can installed directly in an fresh concrete bed or glued on an rubber surface like EUROFLEX® slabs. Glue the steel anchor into the ball with Polyurethane glue Ottocoll M 500 (red) or Ottocioll P83 (grey).

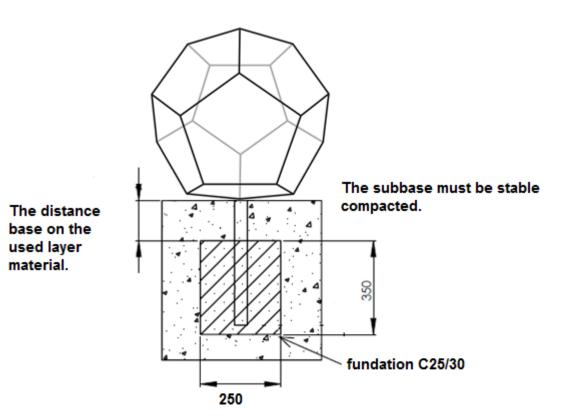

Made in

All information without guarantee, subject to change. The installation instruction is not subject to any






page 1 of 2





Edition: April 2019

Steel plate:

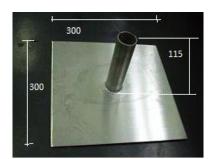

Diameter metal pipe 40mm

The half Diamond could install directly in a fresh concrete bed or glued on the Euroflex slabs.

To avoid colour variations due to differences in sunlight expose, leave the UV protection film on the products as supplied until just prior to installation.

change service. Each current and valid from can be recalled at www.kraiburg-relastec.com/euroflex/

